








EN Installation Manual Exhaust air fans Type AB 30/60 and Type RA 15-60


- Please pass on to user -


Content		
9/R 160-500 9/R 160-700	036765 039891	3
AB 30/60	039995	4
RA 15-60	039996	6
Hinweise Notes		8 9

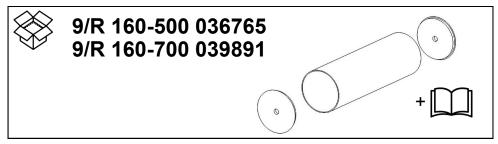

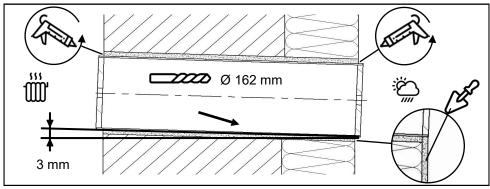


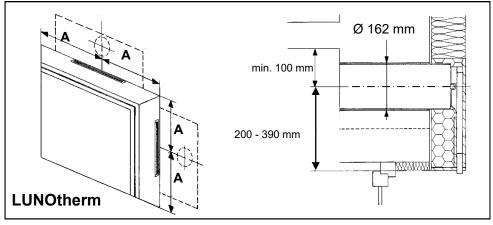


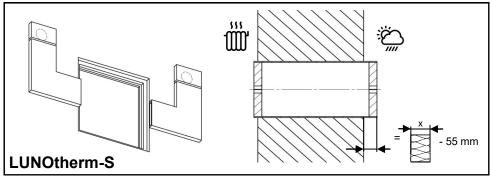


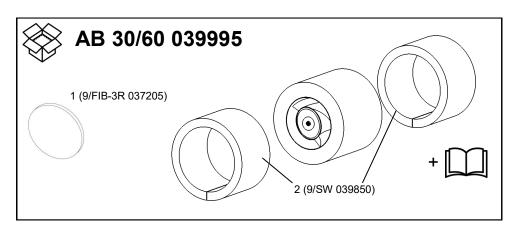



Power supply	100-240 V AC 50/60 Hz
Volume flow	30 m³/h / 60 m³/h
Power consumption	1,6 W / 5 W
Sound power level	36 dB(A) / 52 dB(A)
Sound pressure level 1 m	28 dB(A) / 44 dB(A)
Sound pressure level 3 m	19 dB(A)
Protection class	IP44
Protection type	II
Minimum wall thickness	160 mm
Diameter	154 mm

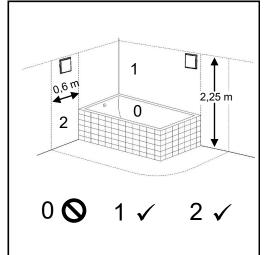


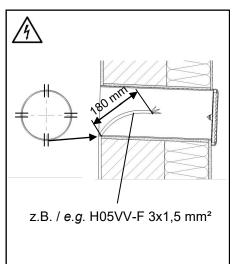

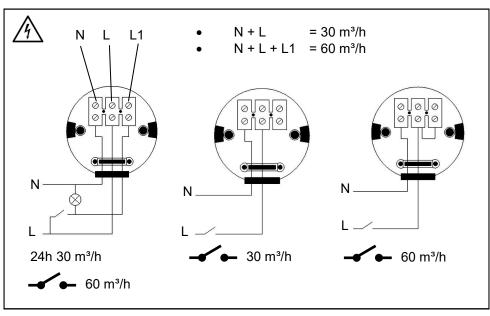


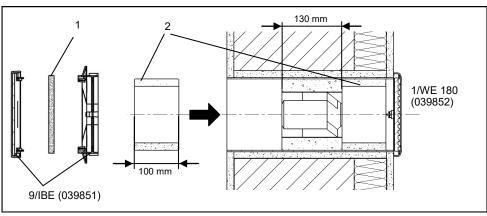


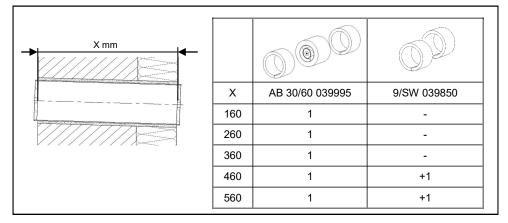


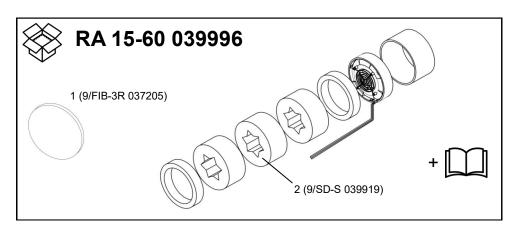



Device voltage	12 V DC SELV, max. 12,6 V
Flow rate	15 - 60 m³/h
Power consumption	0,6 W - 7,2 W
Sound power level	24 - 45 dB(A)
Sound pressure level 1 m	16 - 37 dB(A)
Sound pressure level 3 m	6 - 27 dB(A)
Protection class	IP20
Degree of protection	II
Minimum wall thickness	180 mm
Diameter	154 mm

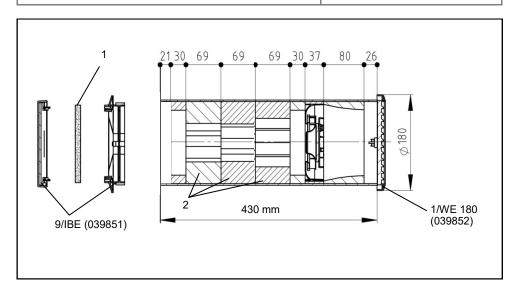

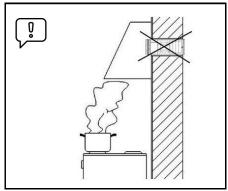

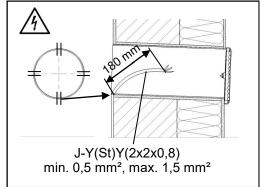

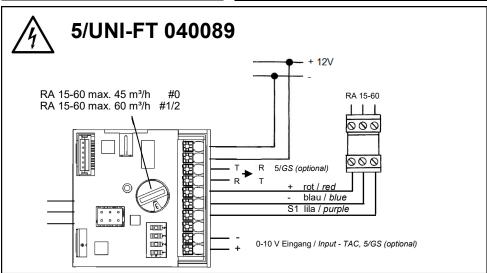

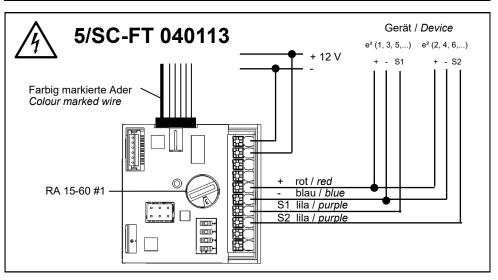

About this manual EN

 Before installing, read these instructions carefully and completely! You must observe the general safety instructions and the warning symbols with notes in the text.

These instructions are to be passed on to the user after installation (tenant, owner, property management etc.).

Symbols in this manual:



This symbol warns you of an injury risk



This symbol warns you of an injury risk from electricity

Safety Instructions



Caution! Installation and assembly work is only to be executed when power supply has been isolated! The ventilation unit is insulated pursuant to Protection Class II, protective earth connection is not required!



Attention! The electrical conection must be installed by authorized skilled staff pursuant to the valid VDE 0100!

Additional installations and electrical components in this ventilation system are not admissible!



Attention! This unit must not be operated by children and persons (filter change/cleaning) who are not able to operate it safely on account of their physical, sensorical or mental capacity or due to their inexperience or lack of know-how.



In the case of fans for exhaust air operation, a functioning back-flow of outside air must <u>always</u> be ensured.



Caution! Any assembly work to the ventilation device may only be carried out after disconnecting all poles of the supply voltage!

Make sure that the supply voltage of all connection lines is voltage-free (dead)! (Separation from the power supply with a minimum contact opening of 3 mm, e.g. electric fuse separating all poles)

Each electric circuit of this ventilation system must be fitted with a residual current protection (e.g. FI switch/RCCB)!

Hints

- Installation in section 1 in bathrooms and shower rooms is admissible pursuant to VDE 100.
- Installation of fan as extractor hood is not admissible

Operating range:

Temperature range: -15°C to +40°C

Usable with relative humidity levels of up to 65% in the interior area (not condensing). The user is requested to switch off the unit and close the inner screen if the application limits are exceeded. Ensure fresh air supply by window ventilation.

Disposal



The packaging must be sorted before disposal. If you wish to dispose of the ventilation device, observe the currently applicable regulations. Pursuant to the German Electrical and Electronic Equipment Act (ElektroG) this device can be returned to your municipal collection point free of charge.

Filter replacement

Check the filter (1) every 3 months for contamination. Clean or replace, if required. Never operate the unit without a filter.

Remove design screen, take filter out, insert new or cleaned filter (filters can be cleaned e.g. in a dishwasher), put design screen on.

The ventilation openings must not be blocked or covered.

Please note here the filter changes you have carried out:

Filter replacement date	Next filter replacement	Type of filter used

Cleaning



If necessary wipe the inner screen and covering frame with a dry soft cloth. Filter replacement and cleaning must not be carried out by children or by persons who are not able to operate the device safely due to their physical, sensory or mental abilities or their inexperience or lack of knowledge.

Additional parts / replacement parts

Inner screen compl. 9/IBE
Replacement filters 9/FIB3R three-pack
Outer grilles:
Order No.: 039 851
Order No.: 037 214

 Type 1/WE 180 white
 Order No.: 039 852

 Type 1/AZ 180 anthracite
 Order No.: 041 143

 Type 1/BE 180 sanded
 Order No.: 039 917

Notes



Partel Ireland Website: www.partel.ie Email: sales@partel.ie Phone: 0818333355

Partel UK Website: www.partel.co.uk Email: sales@partel.co.uk Phone: 02037401918